


NOTE:
BOTTOM LAYER OF INSULATION SHALL BE LAID DOWN IN
A STAGGERED PROFILE. STAGGER AND OFFSET TOP LAYER
OF INSULATION FROM BOTTOM LAYER TO PREVENT
ALIGNED EDGES.

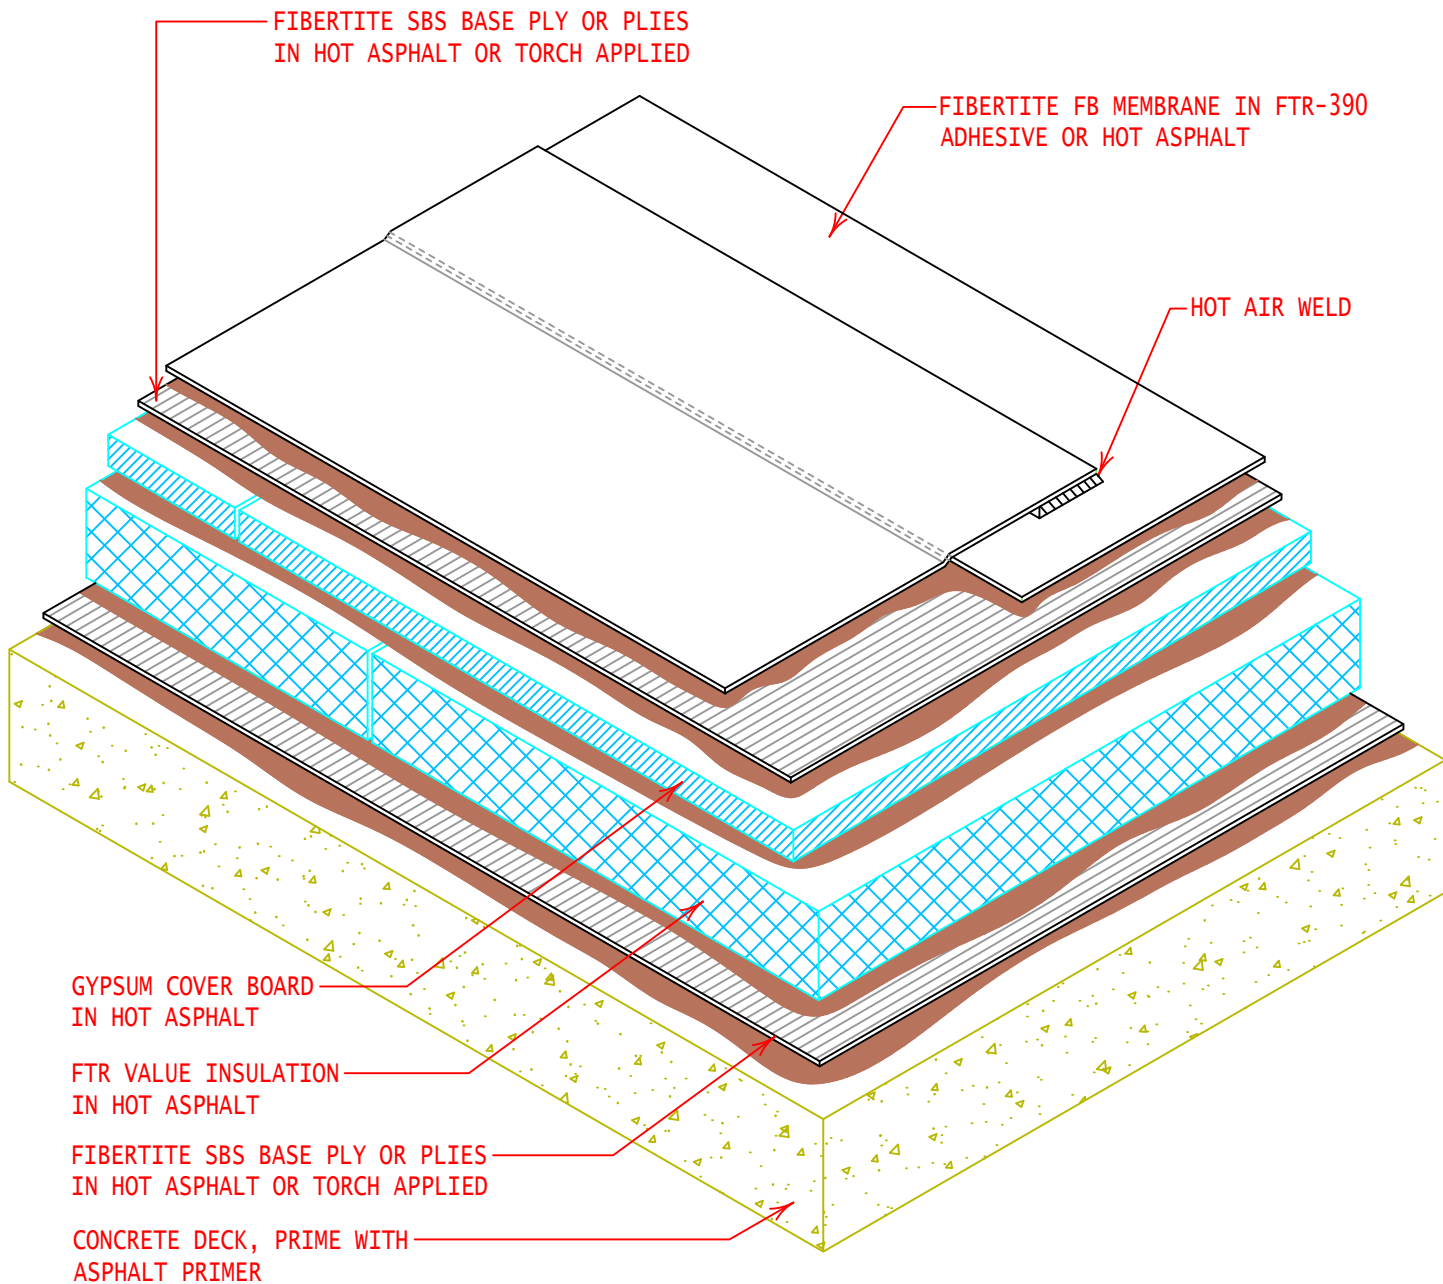

GENERAL REFERENCE: "FTR GS 01/21"		
APPLICABLE SYSTEMS: "FTR MP 01/21"		
REVISES DETAIL	ISSUE DATE	DRAWING NUMBER
ALL PREVIOUS	08-13-13	FTR-DAS1MP